



CONGRATULATIONS, WARRIOR!

You're now the proud owner of the ROCCAT™ Kone XTD Optical – Core Performance Gaming Mouse. With legendary Kone blood pumping through its veins, the Kone XTD Optical delivers a powerful Next Gen combo of core essentials every skirmisher needs to rack up victory after victory. It's powered by a killer performance package loaded with the latest Pro-Optic (R5) optical sensor and a mighty 32-bit Turbo Core V2 72MHz ARM MCU processor – all working in perfect harmony to deliver unrivaled battle performance. Add to that a wealth of ergonomic features designed for long-play comfort and a suite of the world's most advanced gaming software for max customization and it's easy to see why the Kone XTD Optical is good enough to be called a Kone.

Pro-Optic Sensor (R5)

 
The Pro-Optic (R5) sensor with DPI adjustable up to 6400dpi offers superb tracking, transmitting even the fastest of mouse movements with no lag, for incredible precision and gaming control. With a 1000Hz polling rate and optical scanning, accurate up to 50G acceleration, the sensor reacts precisely to your mouse pad, further improving tracking. The DCU (Distance Control Unit) lets you adjust lift-off distance, maximizing your command capabilities.

Easy-Shift[+]™ & ROCCAT™ Driver

The Kone XTD Optical features world famous Easy-Shift[+]™ technology, which lets you set two functions for each mouse button and the scroll wheel – giving you the power to pack a massive amount of quickly-accessible control into a clean, uncluttered space. And the included ROCCAT™ Driver software lets you easily program and fine tune a multitude of settings – and gives you sound feedback with most changes – so you can game exactly how you like.

16.8 Million-Color Lighting System

The Kone XTD Optical is more than just a gaming mouse: It's a fully-customizable atmosphere booster that adds to the mood of every gaming session. That's because it boasts a large rear ROCCAT™ logo that you can illuminate in your choice of 16.8 million vibrant colors. You can even program the logo to "breathe" or rotate in your choice of shades – eye-catching effects that enhance your gaming experience and look excellent with your other ROCCAT™ gear.

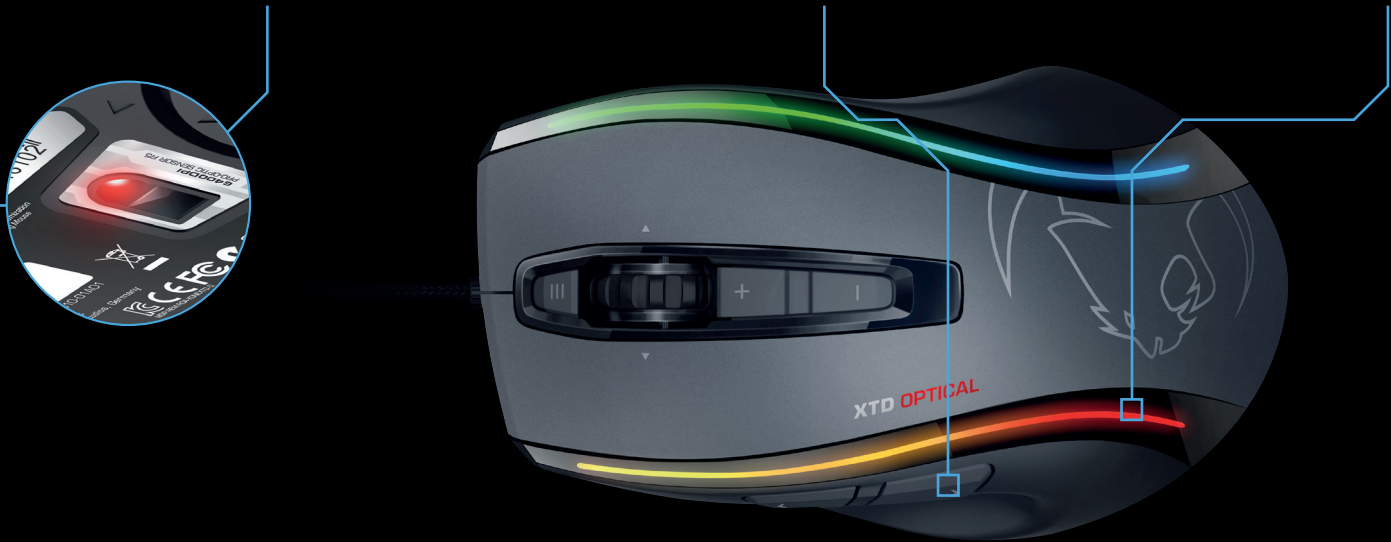

SPECIFICATIONS

PACKAGE CONTAINS

- ROCCAT™ Kone XTD Optical Max Customization Gaming Mouse
- Weight System (4x5g) with hard case
- Quick-Installation Guide

SYSTEM REQUIREMENTS

- Windows® XP, Vista® 32/64 bit, Windows® 7 32/64 bit, Windows® 8/Windows® 8 Pro
- USB 2.0 Port
- Internet connection (for driver installation)

TECH SPECS

- Pro-Optic Sensor (R5) with up to 6400 DPI
- 1000Hz polling rate
- 1ms response time
- 12500fps, 11.25 megapixel
- 50G acceleration
- 5.08m/s (200ips) max speed
- 16-bit data channel
- 72MHz Turbo Core V2 32-bit Arm based MCU
- 576kB on-board memory
- Adjustable angle snapping
- Adjustable Lift-off distance
- 1.8m braided USB cable

 


QUICK-INSTALLATION GUIDE

IMPORTANT DOCUMENT

© 2014 ROCCAT GmbH. All rights reserved. Any product names mentioned in this manual may be trademarks or registered trademarks and are the property of their respective owners. Information contained herein is subject to change without notice. ROCCAT GmbH shall not be made liable for any errors that may appear in this manual. This publication or parts of it may not be reproduced without the express consent of the publisher. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

ROCCAT GmbH
Otto von Bahrenpark, Paul-Dessau-Str. 3G, 22761 Hamburg, Germany

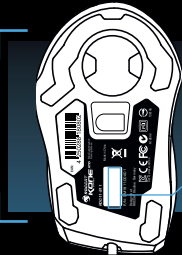

PLEASE USE YOUR PRODUCT'S SERIAL NUMBER
(LOCATED ON THE BOTTOM LABEL) FOR
REGISTRATION. SIGN IN AT:
WWW.ROCCAT.ORG/REGISTER

WWW.ROCCAT.ORG/SUPPORT

Our support team is ready to help with any technical questions. Just send an e-mail to support@roccat.org. Or visit our website at:

Should you need assistance ...

A

DEFAULT BUTTON ASSIGNMENT
(no driver installed)

1 = Left mouse button

2 = Right mouse button

3 = Middle mouse button & universal scroll

4 = Page forward (Browser)

5 = Easy-Shift[+]™ button

6 = Tilt left

7 = Tilt right

 
8 = Mouse wheel up

9 = Mouse wheel down

10 = DPI up

11 = DPI down

12 = Open "My computer" (Windows)

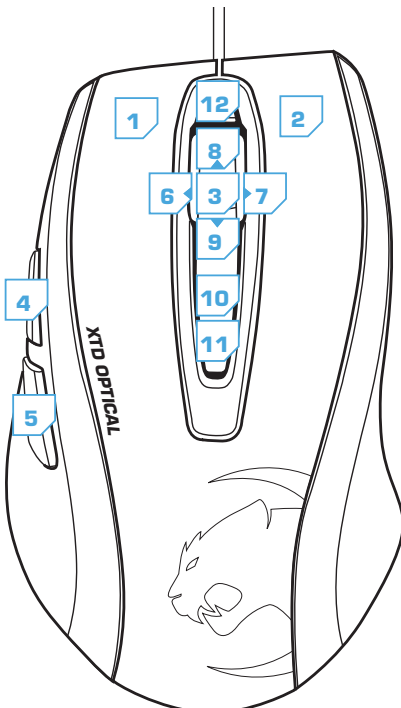

ROCCAT™ EASY-SHIFT[+]™ TECHNOLOGY

GREATLY INCREASE YOUR MOUSE FUNCTIONS

Ingenious Easy-Shift[+]™ technology lets you assign two functions to each of your mouse buttons and the scroll wheel – putting a huge amount of easily-wielded power right at your fingertips. The Kone XTD Optical's Easy-Shift[+]™ button works just like the shift key on a keyboard. Simply hold it down and simultaneously press one of the other mouse buttons – or the scroll wheel (including up and down) – and you execute a second function. This incredibly handy feature increases the number of available functions from 9 to 16.

GET EVEN MORE MACRO MIGHT

Easy-Shift[+]™ also lets you control powerful driver functions right from your mouse – giving you quick control over things like your multimedia options. For example, you can launch your media player, switch music tracks and adjust volume – all with the simple press of a mouse button or scroll of your mouse wheel. With the Kone XTD Optical, flawless ergonomics and maximum functionality coexist in perfect harmony.



Use the **Easy-Shift[+]™** button (#5) to access 2nd level functions on all other mouse buttons and wheel.

This way you can duplicate the number of buttons by assigning **two functions** to each one.

EASY-SHIFT[+]™ EXAMPLES:

Easy-Shift[+]™ WoW:	Easy-Shift[+]™ CS:
5 + 1 = Mount up	5 + 1 = Throw HE
5 + 2 = Dismount	5 + 2 = Throw flash
5 + 3 = Autorun	5 + 3 = Throw smoke
5 + 4 = Use trinket	5 + 4 = Show scores
5 + 6 = Your macro #1	5 + 6 = Buy CT equipment
5 + 7 = Your macro #2	5 + 7 = Buy T equipment
5 + 8 = Pet attack	5 + 8 = Primary weapon
5 + 9 = Pet follow	5 + 9 = Secondary weapon
5 + 10 = Your macro #3	5 + 10 = Team radio #1
5 + 11 = Your macro #4	5 + 11 = Team radio #2
5 + 12 = Use hearthstone	5 + 12 = Team radio #3

Easy-Shift[+]™ Multimedia:	Easy-Shift[+]™ Browser:
5 + 1 = Play or pause	5 + 1 = Page back
5 + 2 = Stop playback	5 + 2 = Page forward
5 + 3 = Mute volume	5 + 3 = New tab
5 + 4 = Switch to full screen & back	5 + 4 = New window
5 + 6 = Play the previous item	5 + 6 = Switch to previous tab
5 + 7 = Play the next item	5 + 7 = Switch to next tab
5 + 8 = Volume up	5 + 8 = Volume up
5 + 9 = Volume down	5 + 9 = Volume down
5 + 10 = Play faster than normal speed	5 + 10 = Switch to full screen & back
5 + 11 = Play slower than normal speed	5 + 11 = Minimize window
5 + 12 = Rewind	5 + 12 = Print page

B

DEFAULT BUTTON ASSIGNMENT: EASY-SHIFT[+]™
(no driver installed)

5 + 1 = Page back (Browser)

5 + 2 = Page forward (Browser)

5 + 3 = Mute volume

5 + 4 = Page back (Browser)

5 + 5 = Disabled

5 + 6 = Previous track

5 + 7 = Next track

 
5 + 8 = Volume up

5 + 9 = Volume down

5 + 10 = Sensitivity up

5 + 11 = Sensitivity down

5 + 12 = Open ROCCAT™ driver (needs to be installed)

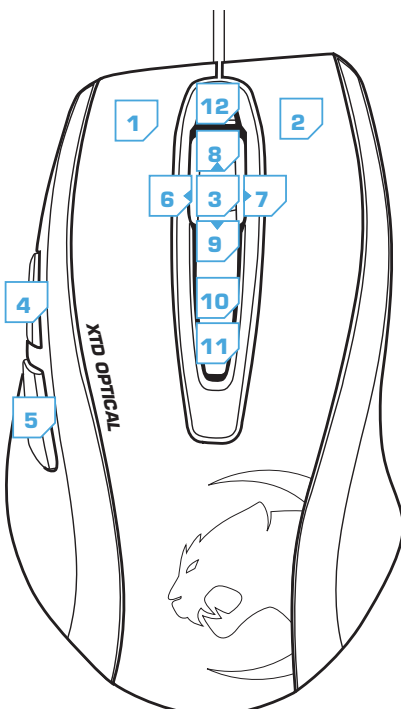

DE

ANLEITUNG

1. Verbinde den USB-Stecker der ROCCAT™ Kone XTD Optical mit einer freien USB-Schnittstelle.

2. Starte deinen Computer und stelle eine Verbindung mit dem Internet her.

3. Gebe in die Adresszeile deines Webbrowsers die folgende URL ein „www.roccat.org/support“ und drücke Enter.

4. Klicke in der linken Navigationsleiste auf den Punkt „ROCCAT™ Kone XTD Optical“. Lade dir auf der sich öffnenden Seite die neueste Treiber-Software herunter.

5. Starte die Treiber-Installation und folge bitte den weiteren Anweisungen auf dem Bildschirm.

EN

INSTRUCTIONS

1. Plug the USB connector on your ROCCAT™ Kone XTD Optical into any free USB port.

2. Boot your computer and connect to the internet.

3. Enter 'www.roccat.org/support' in your browser and hit the return key.

4. In the navigation bar on the left, go to 'ROCCAT™ Kone XTD Optical'. Download the latest driver from the web page that opens.

5. Start the driver installation process and follow the on-screen instructions.

ES

INSTRUCCIONES

1. Enchufa el conector USB del ROCCAT™ Kone XTD Optical a un puerto libre USB.

2. Computa tu ordenador y establece la conexión de Internet.

3. Escribe en tu navegador Web la siguiente URL: www.roccat.org/support y pulsa Enter.

4. En la barra izquierda de navegación haz clic en el punto "ROCCAT™ Kone XTD Optical". En la página que se abre a continuación descárga el software de controlador más actualizado.

5. Inicia la instalación del controlador y sigue las instrucciones que aparecen en pantalla.

JP

使用説明

1. ROCCAT™ Kone XTD Optical のUSBコネクタを空いているUSBポートに差し込みます。

2. コンピュータを起動し、インターネットに接続します。

3. 'www.roccat.org/support' とブラウザに入力し、確定キーを押します。

4. 左側のナビゲーションバーから、'ROCCAT™ Kone XTD Optical'を開きます。開いたウェブページから最新のドライバをダウンロードします。

5. ドライバのインストールプロセスを開始し、画面上の指示に従ってください。

KO

지시사항

1. ROCCAT™ Kone XTD Optical 의 USB 커넥터를 비어 있는 USB 포트에 연결합니다.

2. 컴퓨터를 부팅하고 인터넷에 연결합니다.

3. 브라우저에 ' www.roccat.org/support ' 를 입력하고 리턴 키를 누릅니다.

4. 왼쪽에 있는 탐색 바에서 ' ROCCAT™ Kone XTD Optical ' 로 이동합니다. 웹 페이지가 열리면 최신 드라이버를 다운로드합니다.

5. 드라이버 설치 과정을 시작하여 화면 지시사항을 따릅니다.

RU

ИНСТРУКЦИИ

1. Соедини USB-штекер ROCCAT™ Kone XTD Optical со свободным USB-портом.

2. Запусти компьютер и выйди в интернет.

3. Введи в адресной строке браузера адрес „www.roccat.org/support“ и нажми Enter.

4. Нажми на левой навигационной панели пункт „ROCCAT™ Kone XTD Optical“. Загрузи с открывшейся страницы самые последние драйвера.

5. Запусти инсталляцию драйвера и следуй дальнейшим указаниям на экране.

SC

说明

1. 將 ROCCAT™ Kone XTD Optical 的 USB 接头插入可用的 USB 端口。

2. 启动计算机并连接到 internet。

3. 在浏览器中输入 www.roccat.org/support，点击回车键。

4. 在左边的导航栏中，转到“ROCCAT™ Kone XTD Optical”。从打开的网页中下载最新驱动程序。

5. 开始驱动程序安装进程，按照屏幕上的说明进行操作。

TC

使用說明

1. 將 ROCCAT™ Kone XTD Optical 的 USB 接頭插入尚未使用的 USB 連接埠。

2. 開啟電腦並連接網路。

3. 於瀏覽器輸入「www.roccat.org/support」，再按下輸入鍵。

4. 於左側的導覽列中選擇「ROCCAT™ Kone XTD Optical」，並從開啟的網頁中下載最新的驅動程式。

5. 開始安裝驅動程式，並依據螢幕上的指示操作。

TH

คำแนะนำ

1. เสียบหัวต่อ USB ของ ROCCAT™ Kone XTD Optical กับพอร์ต USB ที่ว่างอยู่

2. บูทเครื่องคอมพิวเตอร์ แล้วเชื่อมต่อกับอินเทอร์เน็ต

3. พิมพ์ 'www.roccat.org/support' ในเบราว์เซอร์ของคุณ แล้วกดปุ่ม return

4. ในแถบนำทางด้านซ้าย ไปที่ 'ROCCAT™ Kone XTD Optical' ดาวน์โหลดจากเว็บเพจที่เปิดมา

5. เริ่มกระบวนการติดตั้งไดรเวอร์ และทำตามคำแนะนำบนหน้าจอ

VN

HƯỚNG DẪN

1. Cắm đầu cắm USB ROCCAT™ Kone XTD Optical's vào mọi cổng cắm USB trống.

2. Khởi động máy tính của bạn và kết nối internet.

3. Nhập 'www.roccat.org/support' vào trình duyệt và nhấn nút trở về.

4. Trong thanh chuyển hướng ở bên trái, vào 'ROCCAT™ Kone XTD Optical'. Tải driver mới nhất từ website đang mở.

5. Khởi động quá trình cài đặt driver và thực hiện theo các hướng dẫn trên màn hình.