

QUICK START GUIDE

READ BEFORE USING

IMPORTANT

049-023 Rating: 5 VDC, 500mA

CERTIFICATION MODEL:

8ft/2.4m USB-C Cable

PACKAGE CONTENTS

Quick-Start Guide

■ Rematch™ Advanced Wired Controller

SETUP

1. Initial Setup

PC, then press the Xbox button on the controller. The light above the Xbox logo will illuminate to indicate it is connected.


Plug the USB-C end of the cable into the top of the controller, and the USB-A side into your console or $\frac{1}{2}$



(Y)




(

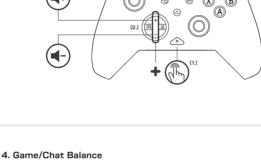

 \bigcirc

While holding down the function button, press D-Pad Left/Right to adjust game/chat balance.

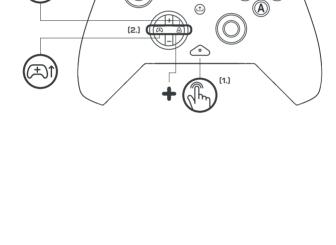

5. Program Back Buttons

■ While holding down the function button, press the back button you would like to map a function to, and the function button LED will start flashing.

■ Press any button you would like mapped, and the function button LED will flash 3 times indicating a successfully mapped function.

д



hair-trigger mode.

7. Control Hub App

analog sticks and triggers, and much more.

Or, if you are on PC, download the App from this link:

To enable hair trigger mode:

■ Toggle the slider buttons on the back of the controller downward to set the trigger buttons back to full-distance mode.

To customize your controller further, download the free Control Hub App from the Windows Store on your PC or Xbox. You can use it to re-map buttons, run diagnostics, recalibrate

Open the Microsoft Store from your PC or Xbox console, search and download "Turtle Beach- PDP Control Hub".

 $\hfill \blacksquare$ Toggle the slider buttons on the back of the controller upward to set the trigger buttons to





TURTLE

Any questions? www.turtlebeach.com/support

BEACH

Please register your product to receive important updates.

www.turtlebeach.com/productregistration